



It is best to grind a flat spot on the 3mm rod to prevent twisting on these two set screws,

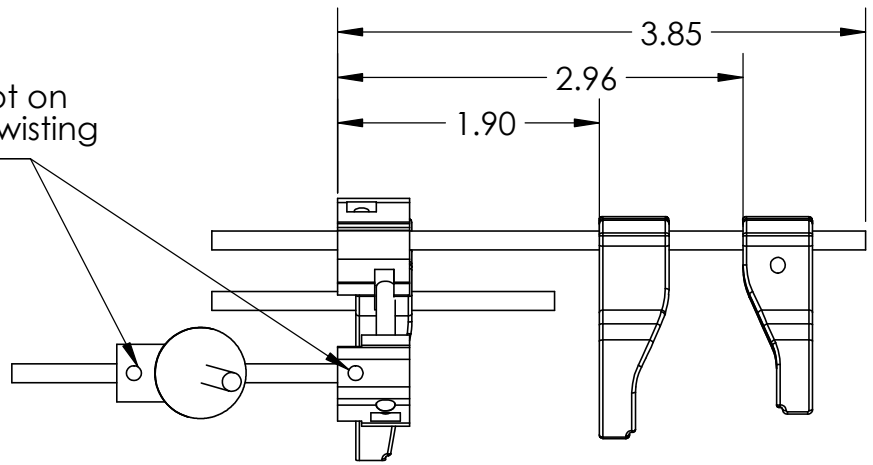


SCALE 1 : 4

Glue two halves together to form ball. Glue to 3mm rod. You may need to remove material from tip to allow for smooth shifting.

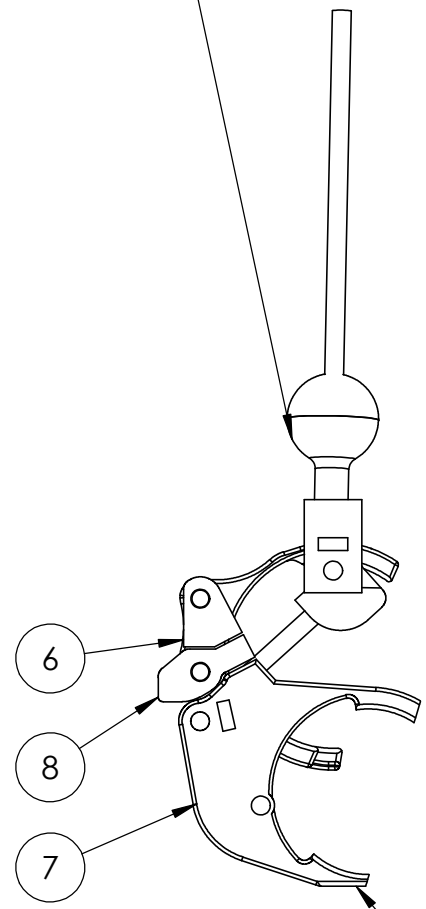


SCALE 1 : 4

May need to clearance parts 6, 7, and 8 for proper fit. Parts should slide back and forth without interference.

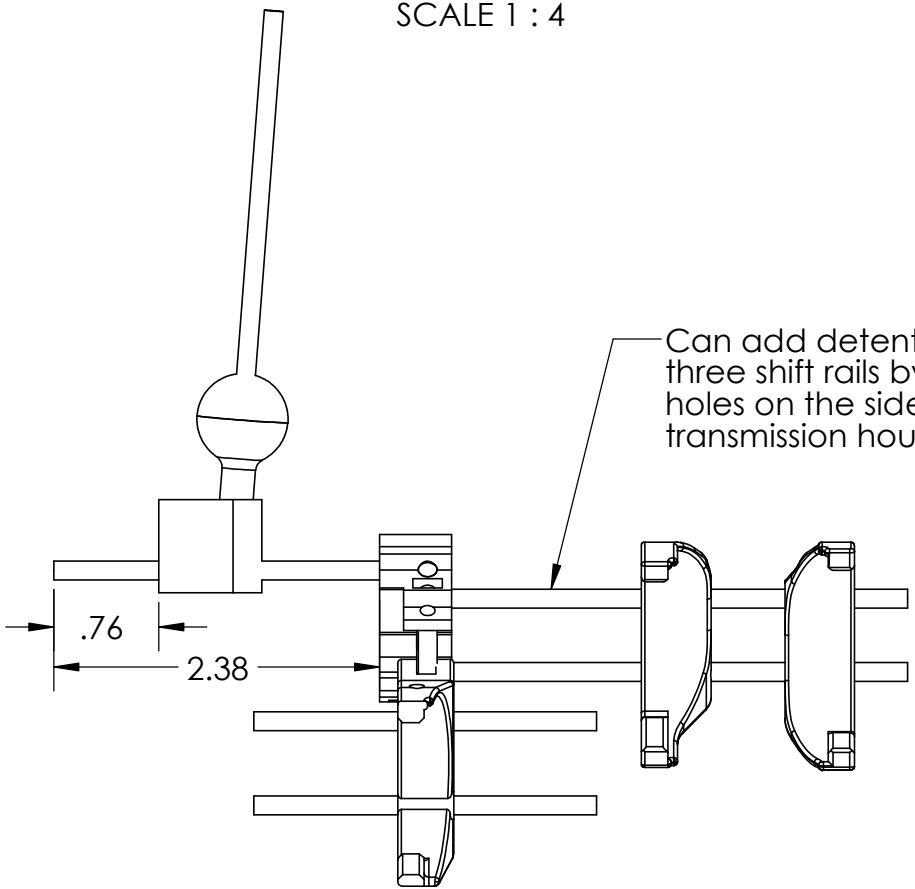


SCALE 1 : 4


Can add detents for the three shift rails by using the holes on the side of transmission housing 2.

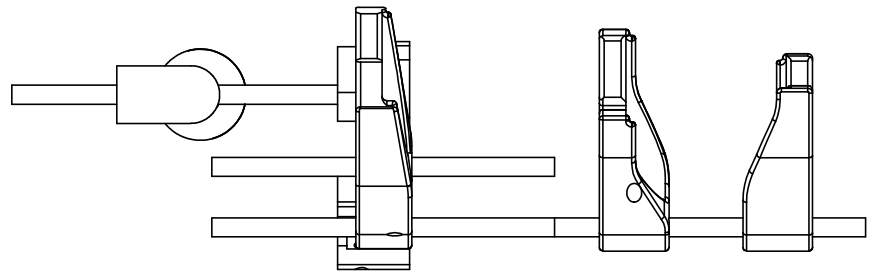

SCALE 1 : 4

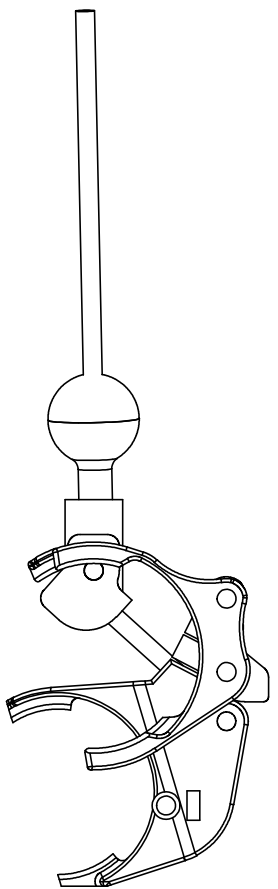

SCALE 1 : 4

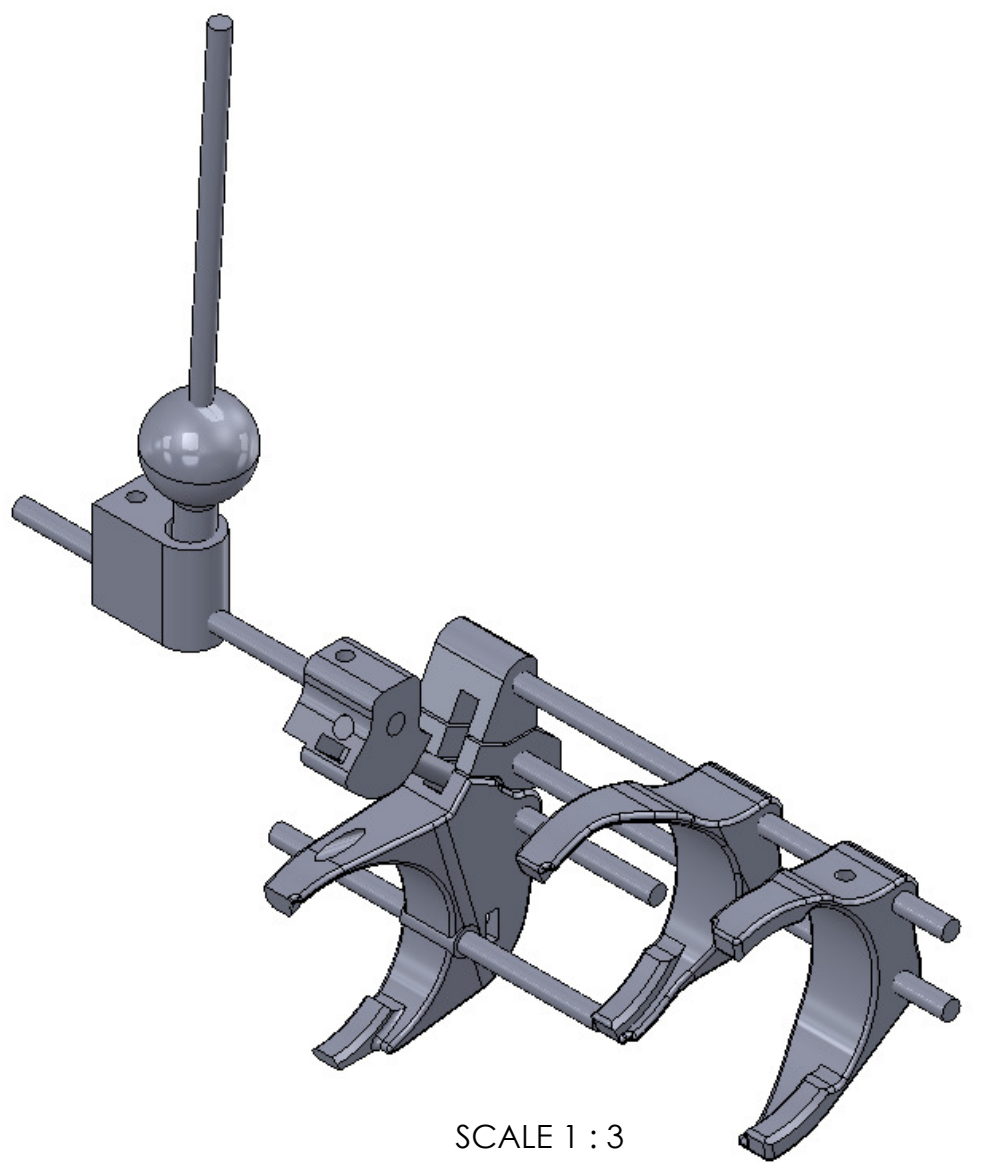

SCALE 1 : 3

Note: All dimension are approximate. Your dimensions will vary. It is best to assemble and line up linkage components in their proper location.